GPX®

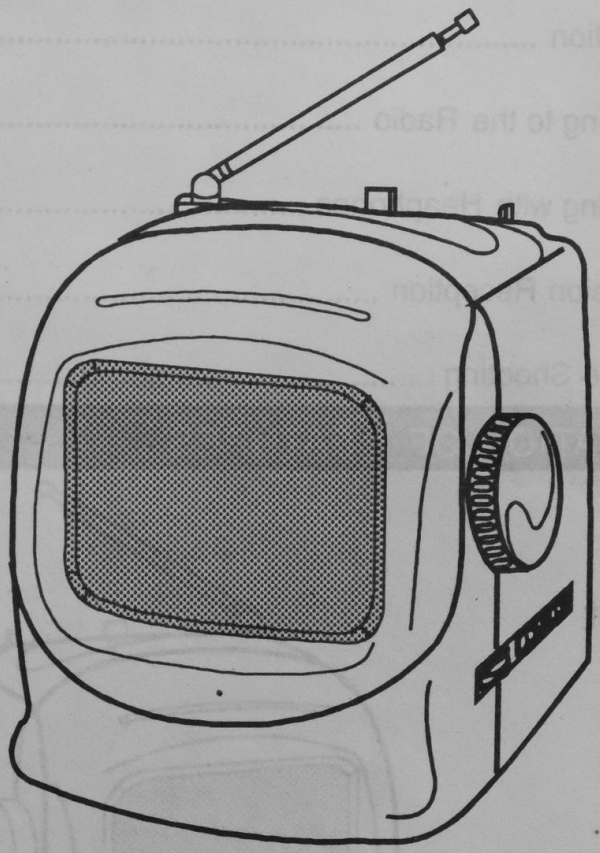

TVP2CT

PORTABLE TELEVISION WITH AM/FM RADIO

INSTRUCTION MANUAL

IMPORTANT - PLEASE READ SAFETY INSTRUCTIONS BEFORE YOU READ THIS OPERATION MANUAL

TABLE OF CONTENTS

Location of Features 1

Power Sources 2

Operation 3

Listening to the Radio 4

Listening with Heaphones 5

Television Reception 5

Trouble Shooting 6

LOCATION OF FEATURES

Front

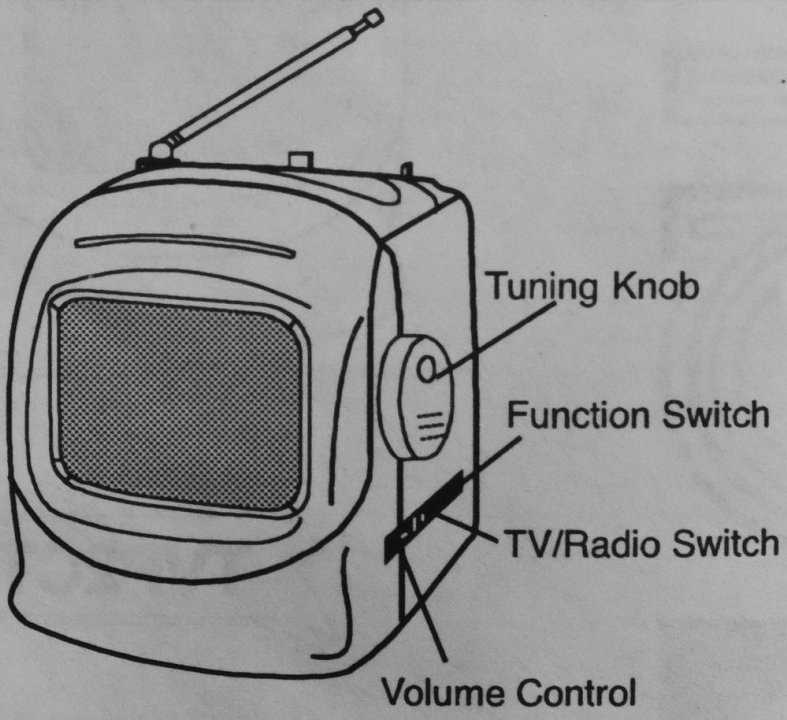

Back

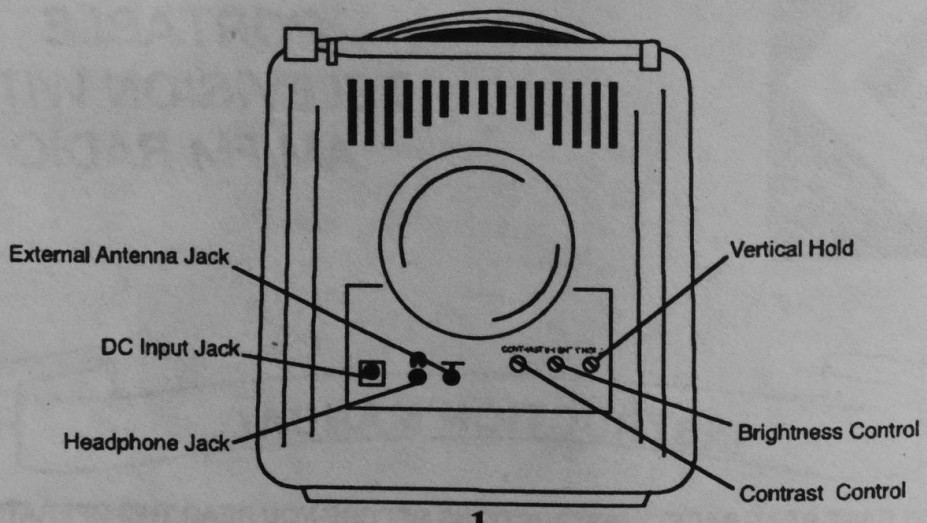

POWER SOURCES

AC Adaptor Power Operation

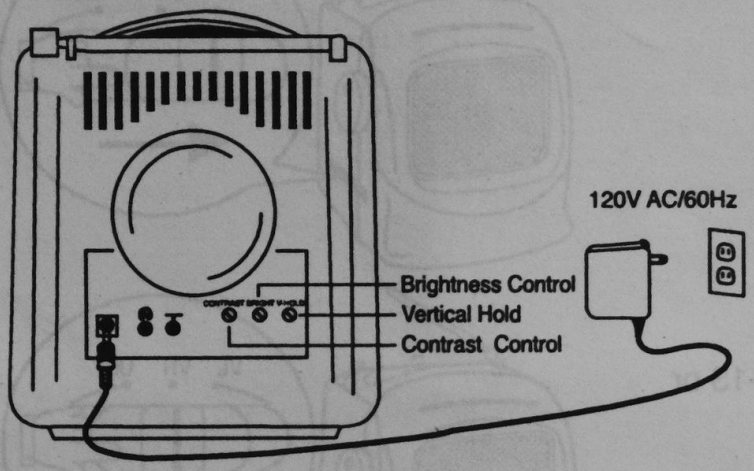

- Plug the AC Adaptor into a 120V AC/60Hz outlet only.
- Plug the other end of the AC Adaptor into the DC Input Jack on the rear of the unit.

Car Adaptor Power Operation

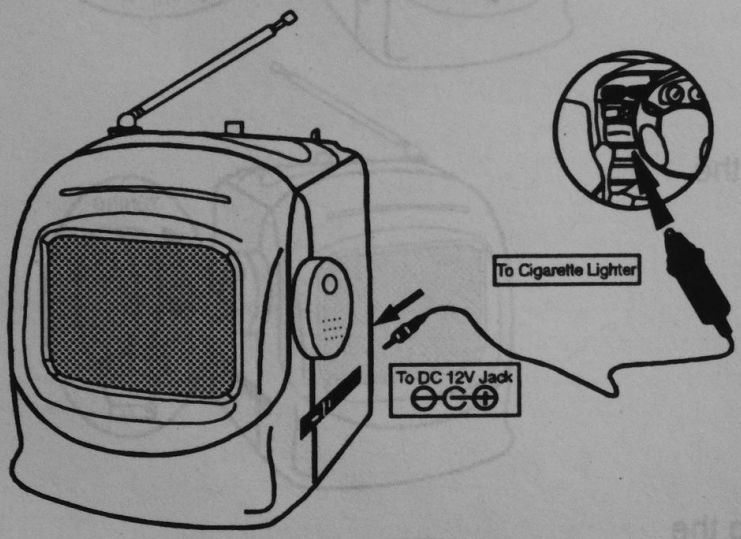

- Plug the DC Adaptor into the cigarette lighter (12V, negative ground system only).
- Plug the other end of the DC Adaptor into the DC Input Jack on the rear of the unit.

Notes:

Remove the DC Adaptor from the cigarette lighter during start up & shut down of the vehicle to prevent damage to the unit.

Battery Power Operation

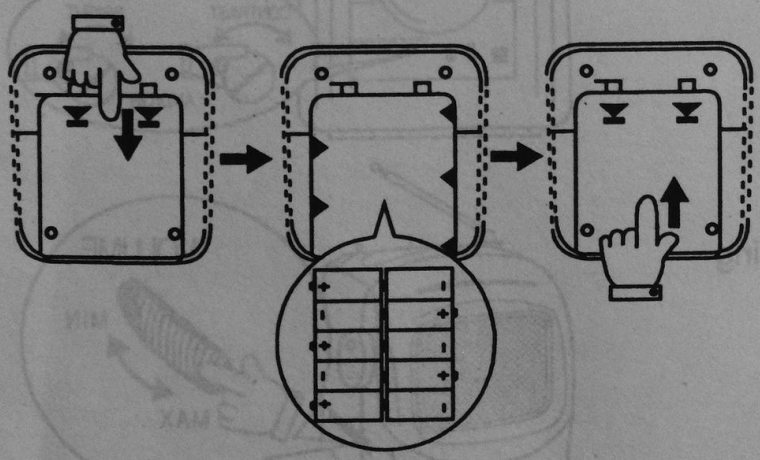

- Open the battery compartment cover.
- Insert 10 "C" size alkaline Follow the polarity as indicated in the battery compartment.
- Close the battery compartment cover.

TELEVISION OPERATION

1. Slide the Function Switch to the TV position.

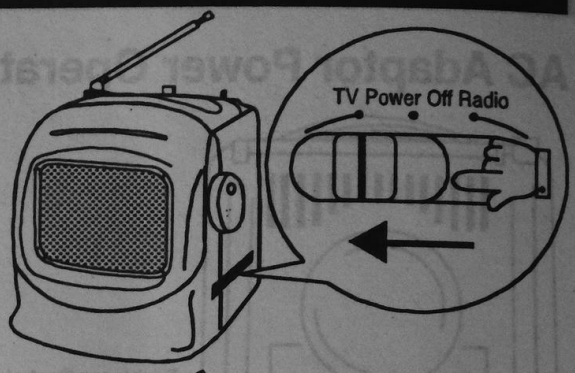

2. Slide the TV/Band Switch to VL-Channel 2-6, VH-Channel 7-13 or UHF- Channel 14-83

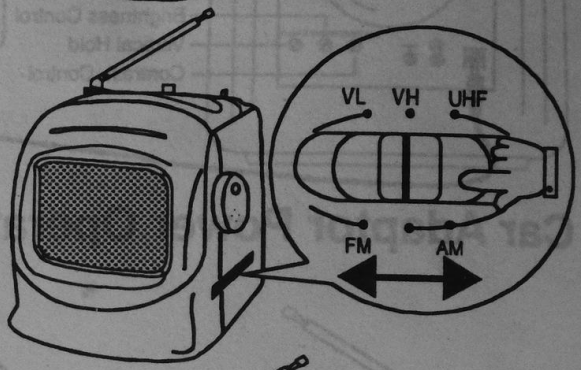

3. Use the Tuning Control to select the desired station.

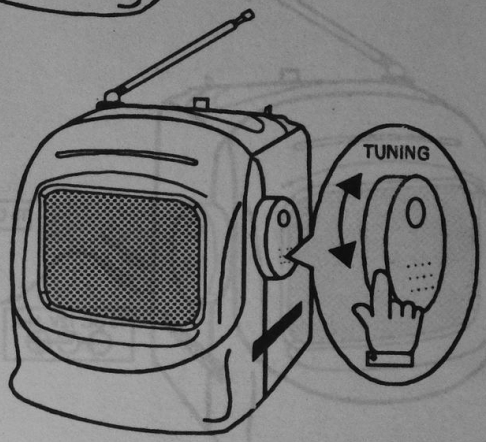

4. Adjust the picture quality using the Brightness and Contrast controls on the back of the unit.

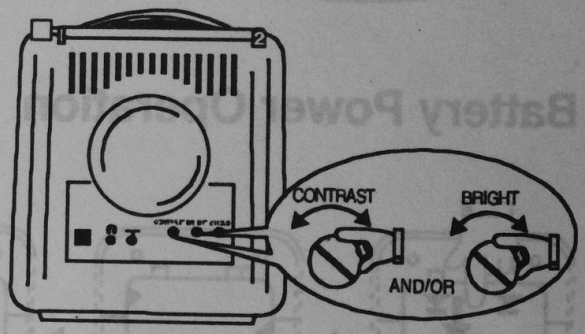

5. Adjust the volume to your listening preference.

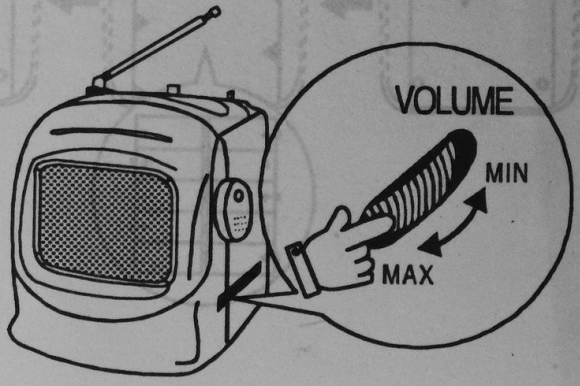

LISTENING TO THE RADIO

1. Set the Function Switch to the Radio position.

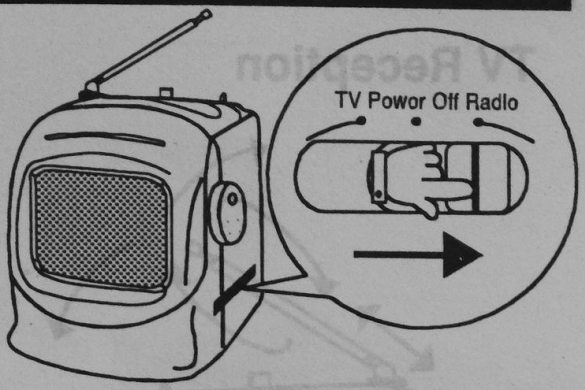

2. Set the TV/Band switch to either AM or FM.

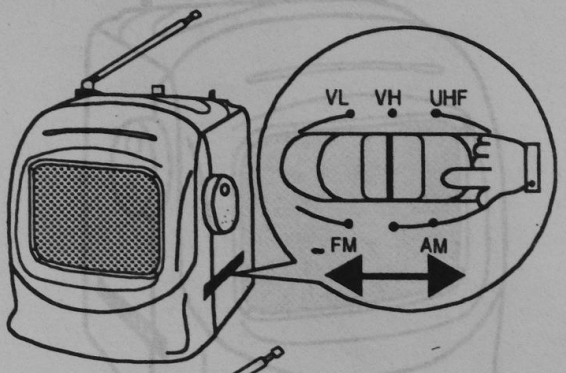

3. Turn the Tuning Control to tune in a radio station.

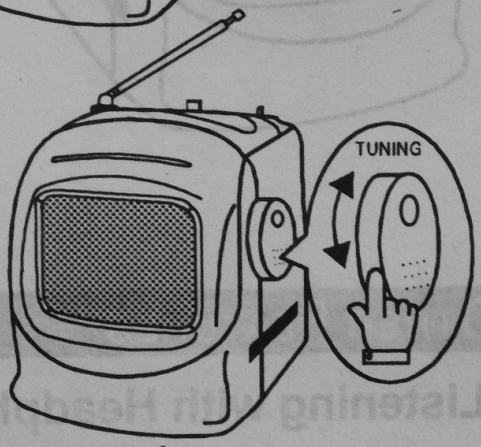

4. Adjust the Volume Control.

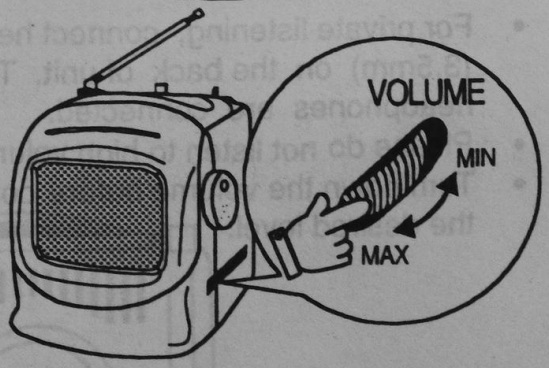

5. To turn off the Radio, set theFunction Switch to the Power Off position.

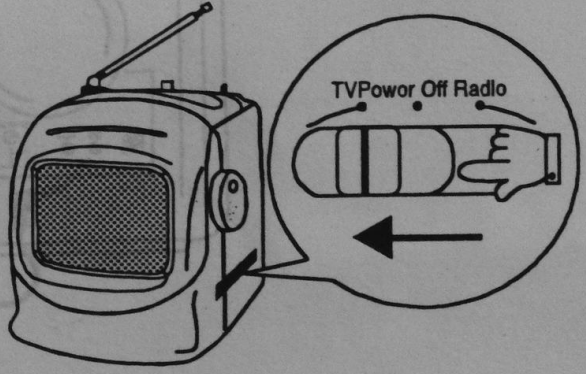

TELEVISION RECEPTION

TV Reception

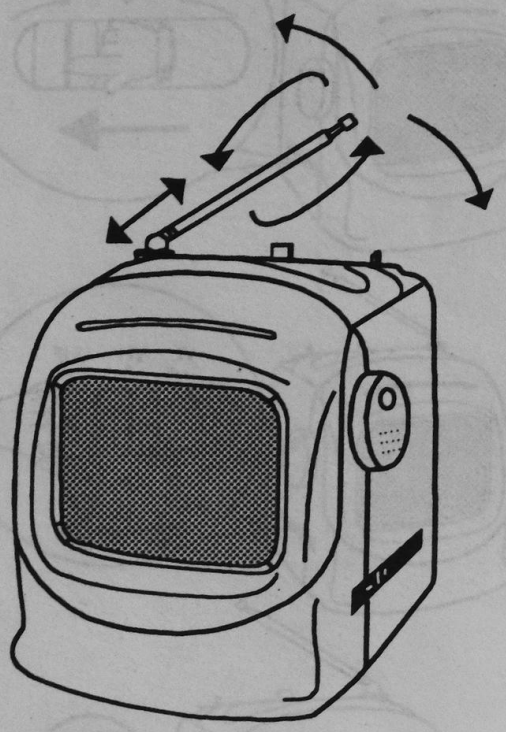

Fully extend the telescopic antenna and adjust fot best reception.

An external antenna (not included) may be connected to the unit using the Antenna Pad (included). Attach 300-ohm twinlead wire from your antenna to the screw-terminals on the Antenna Pad. Plug the Antenna Pad into the External TV Antenna Jack on the rear of the unit.

OTHER FEATURES

Listening with Headphones (Not Included)

- For private listening, connect headphones (not included) to the Headphones Jack (3.5mm) on the back of unit. Thesound from the speaker is muted when the headphones are connected.
- Please do not listen to high volume levels for long periods of time.
- Turn down the volume before connecting the headphones, then adjust the volume to the desired level.

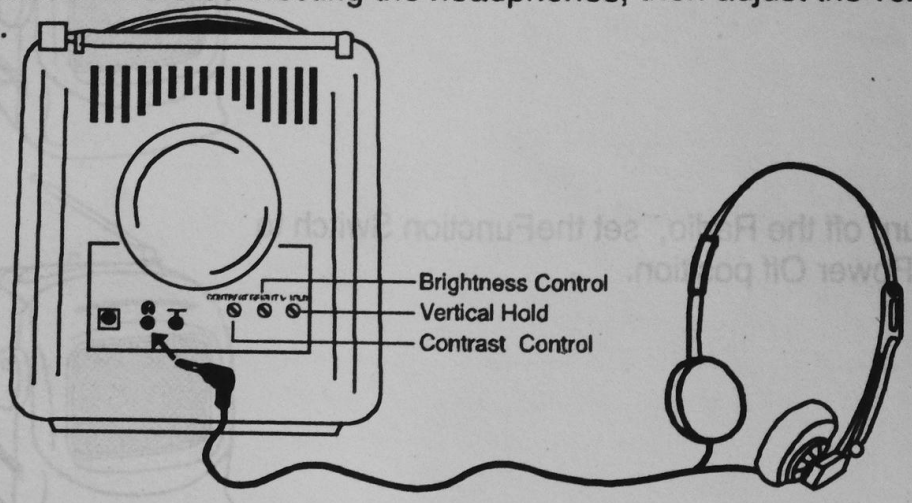

TROUBLESHOOTING

If you have any problems, read this manual again and check the counter measure for each of the symptoms listed below. If the problem persists, contact Consumer Service Center.

Snowy picture
Noisy sound

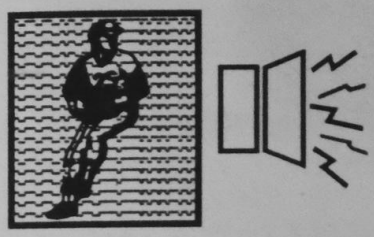

→ Check the antenna.
→ Check the antenna connection on the TV and on the wall.

Dotted lines or stripes

→ This may be caused by local interference (e.g. cars, neon signs, hair dryers, etc.). Adjust the antenna for minimum interference.

Double images or "ghosts"

→ This may be caused by reflections from nearby mountains or buildings. A highly directional antenna may improve the picture.

Good picture
noisy sound

→ Check the antenna connection.

No picture
No sound

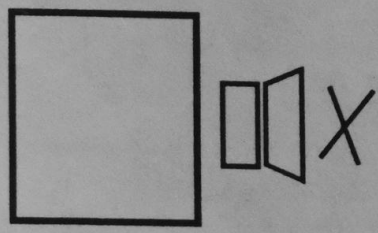

→ Check Function Switch to make sure it is on Radio or TV.
→ Check the antenna connection.
→ Check the Volume level.

Good picture
No sound

→ Tum VOLUME Control.

No Power

→ Check Function Switch to make sure it is on Radio or TV.

DC Adaptor

→ Make sure connection secured on both ends.
→ Check the Fuse. Replace the Fuse if necessary.

Battery

→ Make sure you follow the polarity as indicated in the battery compartment.
→ Replace old batteries with new alkaline batteries.

TV cabinet creaks

→ Even if the picture or the sound is normal, changes in the room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.

GPX®

YORX® ELECTRONICS

101 CHAMBERS STREET, ST. LOUIS, MO 63102. TELEPHONE 314-621-2881, FAX 314-588-1805

LIMITED 90 DAY WARRANTY

GPX / YORX ELECTRONICS warrants this product to the original purchaser to be free from defects in material and workmanship, under normal conditions, for a period of 90 days from date of original purchase.

GPX / YORX ELECTRONICS agrees at our option during the warranty period, to repair any defect in material or workmanship or to furnish an equal product in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase.

To obtain service, return the unit PREPAID to:

GPX / YORX ELECTRONICS
Consumer Service
101 Chambers Street
St. Louis, MO 63102
Tel: (314) 621-2881

(1) Pack the unit in a well padded sturdy carton.
(2) **Enclose a copy of your sales receipt to validate the date of purchase.**
(3) **GPX / YORX ELECTRONICS** will elect to repair or replace the product free of charge, including free return transportation.

NOTE: This Warranty does not cover any product which has been subject to damage due to an act of God, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna.

This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than **GPX / YORX Electronics**, St. Louis MO.

This warranty does not cover products sold AS IS or Re-manufactured units. This warranty is valid only in the United States.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

IMPORTANT NOTICE:
DO NOT RETURN THIS UNIT TO THE RETAIL STORE FOR SERVICE.
REFER TO THE ABOVE WARRANTY SERVICE INSTRUCTIONS.